

# LIFTMASTER® 374UT MINI UNIVERSAL REMOTE COMPARISON PROGRAMMING CHART

Garage Door Opener Manufacture Year	Type/Learn Button	Frequency Code	Opener Model Numbers*	Programming
<b>Chamberlain®/LiftMaster®:</b> 2011 - Current		Security+ 2.0 310 MHz 315 MHz 390 MHz	8365W-267 8550W, 8587W, 8557W, 8360W, 8355W, 8365-267, 8160, 8165, 8155, 8065, 8550, 8587, 8557, 8360, 8355	<ol style="list-style-type: none"> <li>1. Press and release the garage door openers Learn Button</li> <li>2. Press and hold the button on the remote that you would like to program</li> <li>3. Opener lights will flash</li> <li>4. Programming is complete</li> </ol> <p>*If the above steps do not work, follow steps below as if your unit has a purple program button</p>
<b>Chamberlain®/LiftMaster®:</b> 2013 - Current	<b>LEARN</b>	Security+ 2.0 310 MHz 315 MHz 390 MHz	8500	Please note: Learning a remote is done in the wall control panel (888LM). Please see 8500 owners manual
<b>Chamberlain/LiftMaster:</b> 2005 - 2011		Security+ 315 MHz	1345/1355, 1356, 3220, 3255, 3240, 3265, 3270, 3280, 3800, 3500, 3850, 3585, 3595	<ol style="list-style-type: none"> <li>1. Start with garage door closed</li> <li>2. Press and hold the bottom button in the remote until the blue LED stays solid then release the button</li> <li>3. Press and release the Program/Learn button on the garage door button</li> <li>4. On the remote, press and release the button you would like to program twice then wait for the door to move</li> <li>5. Once the door moves, press either button to exit program mode. Programming is complete</li> </ol>
<b>Chamberlain/LiftMaster:</b> 1997 - 2004		Security+ 390 MHz	1245R/1255R, 1265R, 2220, 2245/2255, 2265, 2280, 2500, 2575, 2585, 2595	<ol style="list-style-type: none"> <li>1. Start with garage door closed</li> <li>2. Press and hold the bottom button in the remote until the blue LED stays solid then release the button</li> <li>3. Press and release the Program/Learn button on the garage door button</li> <li>4. On the remote, press and release the button you would like to program twice then wait for the door to move</li> <li>5. Once the door moves, press either button to exit program mode. Programming is complete</li> </ol>
<b>Chamberlain/LiftMaster:</b> 1993 - 1997		Billion Code 390 MHz	1245/1255 1270/1280	<ol style="list-style-type: none"> <li>1. Start with garage door closed</li> <li>2. Press and hold the bottom button in the remote until the blue LED stays solid then release the button</li> <li>3. Press and release the Program/Learn button on the garage door button</li> <li>4. On the remote, press and release the button you would like to program twice then wait for the door to move</li> <li>5. Once the door moves, press either button to exit program mode. Programming is complete</li> </ol>
<b>Genie:</b> 2005 - Current	Intellicode II	315, 390 MHz	Intellicode II compatible models	<ol style="list-style-type: none"> <li>1. Start with garage door closed</li> <li>2. Press and hold the bottom button in the remote until the blue LED stays solid then release the button</li> <li>3. Press and release the Program/Learn button on the garage door button</li> <li>4. On the remote, press and release the button you would like to program twice then wait for the door to move</li> <li>5. Once the door moves, press either button to exit program mode. Programming is complete</li> <li>6. Using the Genie Intellicode 2 remote, press and release the button that is already programmed to the opener and both LED's will flash purple</li> <li>7. On the mini remote, press and release the button that you would like to program 3 times. The blue LED will blink for up to 60 seconds</li> <li>8. The garage door will open and programming is completed</li> </ol>
<b>Linear:</b> 1997 - Current <b>Genie:</b> 1995 - Current <b>Stanley:</b> 1998 <b>Wayne Dalton:</b> 1999	Mega-Code Intellicode Secure Code Rolling Code	318 MHz 390 MHz 310 MHz 372.5 MHz	Mega-Code compatible models Intellicode compatible models Secure Code compatible models Rolling Code compatible models	<ol style="list-style-type: none"> <li>1. Start with garage door closed</li> <li>2. Press and hold the bottom button in the remote until the blue LED stays solid then release the button</li> <li>3. Press and release the Program/Learn button on the garage door button</li> <li>4. On the remote, press and release the button you would like to program twice then wait for the door to move</li> <li>5. Once the door moves, press either button to exit program mode. Programming is complete</li> </ol>

\*Not all available model numbers are listed.